

Part Number	Publication Number	Title	Rev	Date	Model Number	Comments
None	21-30	Altimeter Overhaul Manual W/IPL	1	10-Jun-82	8018 8020	
OBSOLETE	21-33-01	Cabin Rate of Climb Indicator Overhaul Manual W/IPL	1	15-Jan-71	8064	
350028	21-33-02	Cabin Rate of Climb Indicator Overhaul Manual W/IPL	1	29-Nov-77	8064-1	
None	21-33-03	Cabin Altitude Indicator Overhaul Manual W/IPL	-	15-Aug-74	8054	
OBSOLETE	21-33-03 (OM-117)	Altimeter Model 8047/8048 Overhaul Manual		19-Apr-72	8047 8048	
None	21-33-04	Cabin Differential Pressure Indicator Overhaul Manual W/IPL	1	2-Nov-77	8066	
None	21-33-05	Cabin Rate of Climb Indicator Overhaul Manual W/IPL	1	29-Nov-77	8065	
None	21-33-05	Rate of Climb Indicator Overhaul Manual W/IPL	-	15-Dec-77	8504-S30LW	
350017	21-33-06	Differential Pressure/Cabin Altitude Indicator Overhaul Manual W/IPL	1	2-Nov-77	8067/11 8067/21	
350004-1	31-33-03	2" Counter-Pointer Overhaul Manual W/IPL (For units manufactured prior to Jan 1981)	3	7-Jul-82	8047 8048 8048-1	
None	34-10	Airspeed Switch Overhaul Manual		1-Aug-61	6269	
None	34-10-01	Airspeed Switch Overhaul Manual W/IPL		15-Aug-84	6512	
350011	34-10-18	Rate of Climb Indicator Component Overhaul Manual W/IPL	1	15-Mar-84	8504-100	
None	34-10-19	Cabin Altitude Indicator Component Maintenance Manual W/IPL	-	15-Mar-84	8506-100	
350009	34-11-15	Altitude Switch Overhaul Manual W/IPL	F	29-Apr-97	6502 6502-6K 6502-10K 6502-11KA 6502-15M 6502-16K 6502-20 6502-21K 6502-25K 6502-31K 6502-34.5 6502-35K 6502-40K	
350020	34-11-16	Airspeed Switch Overhaul Manual W/IPL	-	1-Jul-88	6501	
350023	34-11-16	Altitude Switch Overhaul Manual W/IPL	-	15-Aug-84	6505	
350024	34-11-16	Altitude Switch Overhaul Manual W/IPL	-	15-Aug-84	6504	

Part Number	Publication Number	Title	Rev	Date	Model Number	Comments
None	34-11-16	Altitude Switch Overhaul Manual W/IPL	-	15-Aug-84	6506	
None	34-11-16	Altitude Switch Overhaul Manual W/IPL	-	15-Aug-84	6507	
350002	34-11-18	Airspeed Switch Component Maintenance Manual W/IPL	-	21-Feb-94	6510	
None	34-11-19	Airspeed Component Maintenance Manual W/IPL	-	1-Jul-85	6522 6523	
350013	34-13-03	Airspeed Indicator Overhaul Manual	-	15-Mar-71	8059-1	
350029	34-13-03	Airspeed Indicator Overhaul Manual W/IPL	5	18-Mar-96	8059-2B 8059-2B-2 8059-2BFJ 8059-2B-35NVG 8059-2B-45NVG	
350004-2	34-13-04	2" Counter-Pointer Overhaul Manual W/IPL (For units manufactured after Jan 1981)	4	8-Jul-96	8047 8047/10 8047/10B 8047/10DH 8047/20 8047/20A 8047/20B 8047/20DH 8048 8048/1	
350006	34-13-05	3" Airspeed Indicator Overhaul Manual W/IPL	C	1-Jun-82	8502C-SLM20LW 8502C-S20LW 8502C-3	
350022	34-13-06	3" Tri-Pointer Altimeter/Encoder Overhaul Manual W/IPL	-	15-Aug-73	8140 8140-LR 8140-LW	
None	34-13-08	3" Drum Altimeter/Encoder Overhaul Manual W/IPL	-	15-Jan-74	8142 8142-LR 8142-LW	NOTE: Title page is dated 15-NOV-73.
None	34-13-09	3" Counter Altimeter/Encoder Overhaul Manual W/IPL		1-Aug-74	8121-M3HW 8121-M3MW 8221-M3HW 8221-M3MW	

Part Number	Publication Number	Title	Rev	Date	Model Number	Comments
350003	34-13-13	3" Tri-Pointer Altimeter/Encoder Overhaul Manual W/IPL	2	13-May-87	8040 8040B-LX 8040B-MB 8040B-MB-LX 8140B-S20LW 8140B-20 8140B-20LX 8140-20MB 8140B-20MB-LX 8140B-30 8140-30LX 8040B-30MB 8140B-30MB-LX 8140B-35 8140B-35LX 8140-35MB 8140B-35MB-LX	
350025	34-13-14	3" Drum Pointer Altimeter/Encoder Overhaul Manual W/IPL		26-Sep-78	8122-A3HW 8122-A3MW 8222-A3HW 8222-A3MW	
350026	34-13-14	3" Counter Altimeter/Encoder Overhaul Manual W/IPL	-	26-Jan-78	8141B 8141B-LX 8140B-MB 8141-MB-LX	
None	34-13-15	3" Drum Altimeter/Encoder Overhaul Manual W/IPL	-	13-Feb-78	8142B 8142-LX 8142-MB 8142-MB-LX	
350018	34-13-16	Counter Pointer Altimeter Component Maintenance Manual W/IPL	-	15-Jul-90	8161B-200-1 8161B-200-2	
350007	34-13-17	3" Tri-Pointer Altimeter Overhaul Manual W/IPL	B	1-Jun-82	8503 8503-S20LW	
350014	34-13-18	Mach Airspeed Indicator Component Maintenance Manual W/IPL	-	15-Jun-90	8502-600-1 8502-600-2	
350010	34-13-19	2" Maximum Allowable Airspeed Indicator Component Maintenance Manual W/IPL	-	15-Feb-90	8502-800-3 8502-900-1	

Part Number	Publication Number	Title	Rev	Date	Model Number	Comments
350005	34-33-18	Online Altitude Indicator Component Maintenance Manual W/IPL	2	Oct-03	8047-700-1 8047-700-3 8047-700-5 8047-700-7 8047-700-9 8047-700-11 8047-700-53 8047-700-53MB	
None	AM-108	Mach Airspeed Sensor Modification Procedure		23-May-63	6249 to 6326 6234 to 6339	
None	NAVAIR 05-90-510	Overspeed Warning Sensor Overhaul Instructions NOTE: CHANGE PAGES ONLY		15-May-67	6278-6 6278-10	Distribution Limited
None	NAVAIR 05-90-511	Overspeed Warning Sensor Illustrated Parts Breakdown NOTE: CHANGE PAGES ONLY		15-May-67	6278-6 6278-10	Distribution Limited
350012	None	Altitude Alert System Installation and Operation Manual	-	8-Dec-94	AM275 AM275C	
350015	None	Altitude Alerter Overhaul Manual w/IPL	-	None	AM275 AM275C	
350030	None	Pen Turbo (Caribou) Instrument Stack & DDMP Operators Manual		Dec-02	7700-P1	
None	None	AD/100 and 9150 Installation Manual		Aug-74	AD/100 9150	
None	None	Altimeter Setting Indicator Installation and Operation Manual	-	Dec-86	8096-1 8096-10	
None	None	Altitude Transducer Overhaul Manual W/IPL		1-Jun-79	9264-20N	
None	None	Digital Altitude Display System Installation and Operation Manual	-	10-Sep-80	AM270	
None	None	Digital Altitude Display System Overhaul Manual	-	None	AM270	
None	None	Operation, Installation and Maintenance Data for Model 8065	1	8-Feb-72	8065	
None	None	Remote Altitude Encoder Installation Manual		30-May-75	9150 9151	
None	OM-101	Airspeed Switch Overhaul Manual		21-Aug-61	6248-1 6275-1	
None	OM-102	Airspeed and Mach Switches Overhaul Manual		15-Sep-61	6234-3 6234-4 6249	

Part Number	Publication Number	Title	Rev	Date	Model Number	Comments
None	OM-103	Multiple Mach and Airspeed Switch Overhaul Manual		2-Oct-61	7000	
None	OM-104	Multiple Mach and Airspeed Switches Overhaul Manual (includes 2 Page Addendum dated 1-March-1967)		20-Nov-61	7001-3 7001-5 7001-801 7001-803 7001-805 7001-807 7001-815 7002-3 7002-5 7002-7 7002-9 7002-11 7002-13	
None	OM-105	Differential Pressure Gauge Overhaul Manual		15-Mar-62	8007	
350021	OM109A	Mach and Airspeed Sensors Overhaul Manual W/IPL	-	10-Feb-70	6326 6339	
None	OM-110	Multiple Mach and Airspeed Sensor Overhaul Manual		26-Aug-63	7003-3 7003-5 7003-7 7004-3 7004-5 7004-7	
350008	OM-111	Mach and Airspeed Sensors Overhaul Manual	-	30-Apr-93	6270A-PI 6270AA 6270FI 6270PAC 6270PI 6329	
None	OM-113	Dual Airspeed Switch Overhaul Manual		5-Jun-68	9111	
Out of date	OM-113	Airspeed Switch Assembly Overhaul & Calibration	-	10-Mar-65	6270FI 6270GMAT 6270PAC 6330	
None	OM-114	Aneroid Switch Overhaul Manual	-	25-Jun-68	9012	
350019	OM-115	Low Pressure Indicator Overhaul Manual W/IPL	-	1-Oct-68	8016	

Part Number	Publication Number	Title	Rev	Date	Model Number	Comments
None	T.O. 5F3-3-31-3	Standby Pressure Altimeter Overhaul Instructions	1	1-May-90	8047-500	<i>Distribution Limited</i>
None	T.O. 5F3-3-31-4	Standby Pressure Altimeter Illustrated Parts Breakdown	1	1-May-90	8047-500	<i>Distribution Limited</i>
None	T.O. 8S2-9-7-3	Pressure Switch Overhaul Instructions W/IPL	2	1-May-84	6305 6305-2 6305-2F5 6305-10N	<i>Distribution Limited</i>
None	T.O. 8S3-2-55-3	Overspeed Warning sensor Overhaul Manual		20-Mar-68	6278-1 6278-6 6278A6	<i>Distribution Limited</i>
None	T.O. 8S3-2-55-4	Overspeed Warning Sensor Illustrated Parts Breakdown		20-Mar-68	6278-1 6278-6 6278A6	<i>Distribution Limited</i>